



ECP 200 BASE 2 / 4



USE AND MAINTENANCE MANUAL

CONTENTS

INTRODUCTION

CHAP. 1

Page 4	1.1	General
Page 4	1.2	Product ID codes
Page 5	1.3	Overall dimensions
Page 5	1.4	Identification data

INSTALLATION

CHAP. 2

Page 6	2.1	Important information for the installer
Page 6	2.2	Standard assembly kit
Page 7	2.3	Installing the unit

FUNCTIONS

CHAP. 3

Page 8	3.1	ECP200 BASE panel functions
--------	-----	-----------------------------

TECHNICAL CHARACTERISTICS

CHAP. 4

Page 9	4.1	Technical characteristics
Page 10	4.2	Warranty

PARAMETER PROGRAMMING

CHAP. 5

Page 11	5.1	Control panel
Page 11	5.2	Frontal keypad
Page 12	5.3	LED display
Page 13	5.4	General
Page 13	5.5	Key to symbols
Page 13	5.6	Setting and displaying set points
Page 14	5.7	Level 1 programming
Page 15	5.8	List of Level 1 variables
Page 16	5.9	Level 2 programming
Page 16	5.10	List of Level 2 variables
Page 18	5.11	Switching on the ECP200 BASE electronic controller
Page 18	5.12	Compressor activation/deactivation conditions
Page 18	5.13	Manual defrosting
Page 19	5.14	Hot gas defrosting
Page 19	5.15	Pump down function
Page 19	5.16	Password protection

OPTIONAL KITS

CHAP. 6

Page 20	6.1	TeleNET monitoring / supervision system
Page 21	6.2	ALARM RELAY / TeleNET switching

TROUBLESHOOTING

CHAP. 7

Page 24	7.1	Troubleshooting
---------	-----	-----------------

ALLEGATI / APPENDICES

Page 23	A.1	EC declaration of conformity
Page 24	A.2	ECP200 BASE 4 wiring diagram
Page 25	A.3	ECP200 BASE 4A wiring diagram
Page 26	A.4	ECP200 BASE 2 wiring diagram
Page 27	A.5	ECP200 BASE 2A wiring diagram
Page 28	A.6	Connection example (1) - ECP200 BASE4 /BASE4A
Page 29	A.7	Connection example (2) - ECP200 BASE4 /BASE4A
Page 30	A.8	Connection example (3) - ECP200 BASE2 /BASE2A
Page 31	A.9	Connection example (4) - ECP200 BASE2 /BASE2A
Page 32	A.10	TeleNET network connection diagram
Page 33	A.11	SCHINT230 OPTIONAL KIT
Page 34	A.12	SCHINT230 OPTIONAL KIT wiring diagram

CHAPTER 1: INTRODUCTION

1.1

GENERAL

The electronic controllers of the **ECP200 BASE** series have been designed to control static or ventilated cold rooms.

The **ECP200 BASE 4** electronic board allows the user to control all the components on a refrigeration unit such as compressor, evaporator fans, defrosting elements and cold room light.

The applications are:

- single-phase static or ventilated refrigeration systems up to 2 HP, with off-cycle or electrical defrosting
- out of room unit to be connected to power board for compressor, defrosting and fan start.
- single-phase evaporator control unit with cold solenoid consensus or remote condensing unit consensus

The **ECP200 BASE 2** electronic board allows the user to control the compressor and room light.

The applications are:

- single-phase refrigeration systems up to 2 HP with off-cycle defrosting.
- out of room unit to be connected to power board for compressor start.

The ABS controller box is simple to install and can easily be wall-mounted as the **ECP200 BASE** is extremely compact and features an IP65 protection rating.


1.2

PRODUCT ID CODES

ECP200 BASE 2	controls and manages compressor and room light.
ECP200 BASE 2 A	controls and manages compressor and room light. Alarms relay.
ECP200 BASE 4	controls and manages compressor, defrosting elements, evaporator fans and room light.
ECP200 BASE 4 A	controls and manages compressor, defrosting elements, evaporator fans and room light. Alarms relay.

OVERALL DIMENSIONS

1.3

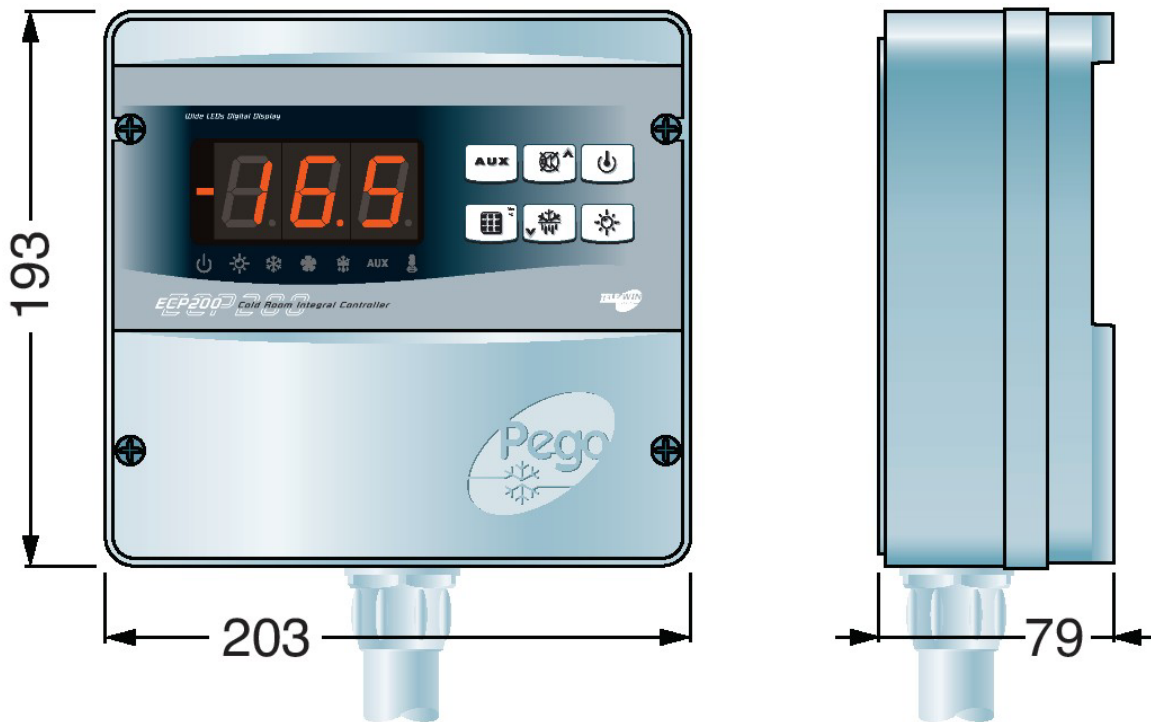

IDENTIFICATION DATA

1.4

The unit described in this manual has an ID plate on the side showing all the relevant identification data:

- Name of Manufacturer
- Code and model of unit electrical board
- Serial number
- IP protection rating
- Power supply



CHAPTER 2: INSTALLATION

2.1

IMPORTANT INFORMATION FOR THE INSTALLER

1. Install the device in places where the protection rating is observed and try not to damage the box when drilling holes for wire/pipe seats.
2. Do not use multi-polar cables in which there are wires connected to inductive/power loads or signalling wires (e.g. probes/sensors and digital inputs).
3. Do not fit power supply wiring and signal wiring (probes/sensors and digital inputs) in the same raceways or ducts.
4. Minimise the length of connector wires so that wiring does not twist into a spiral shape as this could have negative effects on the electronics.
5. Fit a general protection fuse upstream from the electronic controller.
6. All wiring must be of a cross-section suitable for relevant power levels.
7. When it is necessary to make a probe/sensor extension, the wires must have a cross-section of at least 1 mm².

2.2

STANDARD ASSEMBLY KIT

For the purposes of assembly and use, the electronic **ECP200 BASE** control unit comes with:

- N° 3 seals, to be fitted between the fixing screws and the box back panel
- N° 1 user's manual.


INSTALLING THE UNIT

2.3

Fig. 1: Undo the 4 screws on the front of the panel.



Fig. 2: Use the three existing holes to fix the box back panel to the wall: use three screws of a length suitable for the thickness of the wall to which the panel will be attached. Fit a rubber washer (supplied) between each screw and the box backing.

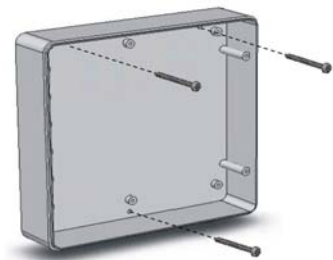

Make all the electrical connections as illustrated in the diagram for the corresponding model (see relative table in APPENDICES).

To effect correct electrical connection and maintain the protection rating, use appropriate wire/raceway grips to ensure a good seal.

Route the wiring inside the unit in as tidy a fashion as possible: be especially careful to keep power wires away from signal wires. Use clips to hold wires in place.



Fig. 3: close the front panel, making sure that all the wires are inside the box and that the box seal sits in its seat properly. Tighten the front panel using the 4 screws, making sure the O-rings on the head of each screw are used. Power up the panel and carry out thorough reading/programming of all the parameters.



Be careful not to over-tighten the closure screws as this could warp the box and compromise proper operation of the membrane-type keypad.

Install short-circuit overload safety devices on all the power cables connected to the ECP200 controller so as to prevent damage to the device. Work and/or maintenance must ONLY be carried out on the unit after disconnecting the panel from the power supply and from any inductive/power loads: doing so allows the worker to do his job safely.



CHAPTER 3: FUNCTIONS

3.1***ECP200 BASE PANEL FUNCTIONS***

- Display and adjustment of cold room temperature accurate to 0.1 °C.
- Display of evaporator temperature from parameter
- System control activation/deactivation
- System warnings (probe/sensor errors, minimum and maximum temperature warnings, compressor shutdown)
- Evaporator fans control
- Automatic and manual defrost (static, heating element, cycle inversion)
- Direct control of compressor unit up to 2 HP
- Room light, via panel key or door switch
- Alarms/auxiliary relay

CHAPTER 4: TECHNICAL CHARACTERISTICS

TECHNICAL CHARACTERISTICS

4.1

Power supply	
Voltage	230 V~ ± 10% 50/60 Hz
Max power	~ 7 VA
Cold room conditions	
Working temperature	-5 - 60°C
Storage temperature	-10 - 70°C
Relative humidity	Less than 90%
General characteristics	
Type of sensors that can be connected	NTC 10K 1%
Resolution	0.1°C
Sensor read precision	± 0.5°C
Read range	-45...+45
ECP200 BASE 4 - Output characteristics - max applicable load (230 V AC)	
Compressor	1500 W (AC3)
Elements	3000 W (AC1)
Fans	500 W (AC3)
Room light	800 W (AC1)
Alarm contact (non-powered contact)	100 W (BASE 4 A version only)
ECP200 BASE 2 - Output characteristics - max applicable load (230 V AC)	
Compressor (non-powered contact)	1500W (AC3)
Room light (non-powered contact)	800W (AC1)
Alarm contact	100W (BASE 2 A version only)
Dimensional characteristics	
Dimensions	19.3 cm x 7.9 cm x 20.3 cm (HxDxL)
Insulation / mechanical characteristics	
Box protection rating	IP65
Box material	Self-extinguishing ABS
Type of insulation	Class II

4.2

WARRANTY

The electronic controllers in the **ECP200 BASE series** are covered by a 24-month warranty against all manufacturing defects, valid from date of delivery. If the system malfunctions as a result of tampering, impact or improper installation the warranty will automatically be rendered null and void. It is strongly recommended that you observe all instructions/information regarding the technical characteristics of the device.

**WARNING !**

Any modifications made to wiring and/or internal components or any work carried out in a way that fails to comply with the information/instructions in this manual shall render the warranty null and void immediately. Modifications/improper work may cause malfunctions, irreparable damage, serious injury or put persons/objects in danger.



PEGO S.r.l. cannot be held liable for possible errors or inaccuracies written in this manual as a result of printing or transcription errors.

PEGO S.r.l. reserves the right to modify its products as it deems necessary without altering its main characteristics. Each new release of a **PEGO** user manual replaces previous ones.

CHAPTER 5: PARAMETER PROGRAMMING


CONTROL PANEL






5.1

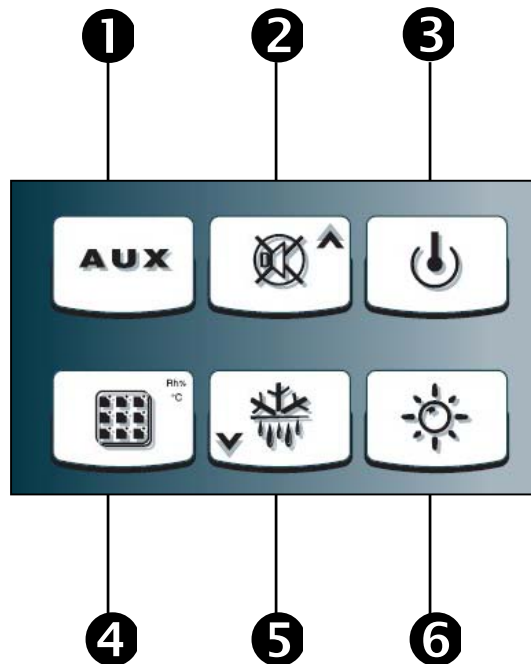

FRONT KEYPAD


5.2



1. **AUX** key: **AUXILIARY RELAY CONTROL** (on the version with alarm relay controls the relay manual if parameter AU=1)
2.  key: **UP / MUTE WARNING BUZZER**
3.  key: **STAND BY** (if the system shuts down the LED flashes)
4.  key: room temperature **SETTING**
5.  key: **DOWN / MANUAL DEFROST**
6.  key: **ROOM LIGHT**

LED DISPLAY

5.3

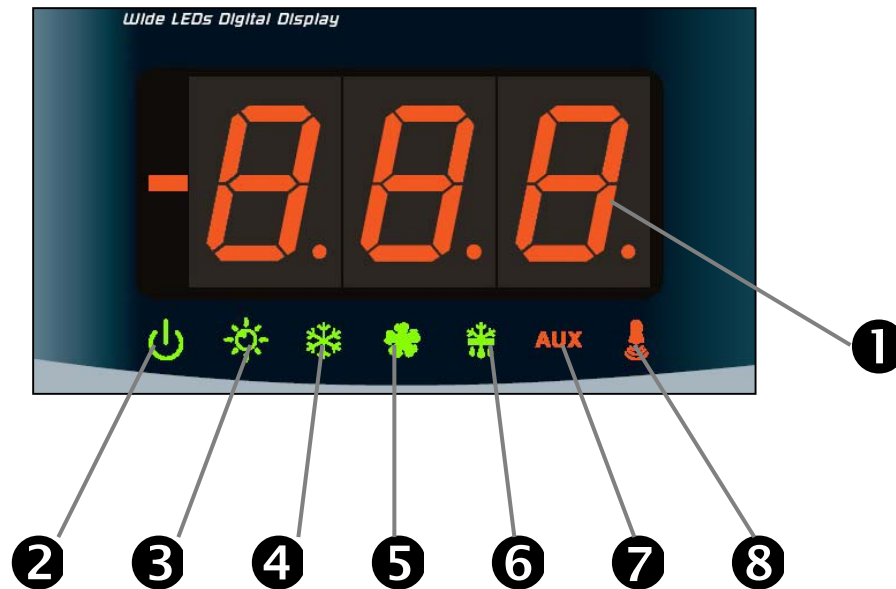

1. Cold room temperature / parameters
2. Stand-by (flashes on stand-by. Outputs are deactivated)
3. Room light (flashes if door switch activated)
4. Cold (indicates activation of compressor)
5. Fans
6. Defrosting
7. Auxiliary
8. Alarm/warning

5.4

GENERAL



To enhance safety and simplify the operator's work, the **ECP200 BASE system** has two programming levels; the first level (Level 1) is used to configure the frequently-modified **SETPOINT** parameters. The second programming level (Level 2) is for general parameter programming of the various controller work modes.

It is not possible to access the Level 2 programming directly from Level 1: you must exit the programming mode first.

5.5

KEY TO SYMBOLS

For purposes of practicality the following symbols are used:

- (▲) the UP key  is used to increase values and mute the alarm.
- (▼) the DOWN key  is used to decrease values and force defrosting.

5.6

SETTING AND DISPLAYING THE SET POINTS

1. Press the **SET key** to display the current **SETPOINT** (temperature)
2. Hold down the **SET key** and press the (▲) or (▼) keys to modify the **SETPOINT**.

Release the **SET key** to return to cold room temperature display: the new setting will be saved automatically.

LEVEL 1 PROGRAMMING (User level)

5.7

To gain access to the Level 1 configuration menu proceed as follows:

1. Press the (▲) and (▼) keys simultaneously and keep them pressed for a few seconds until the first programming variable appears on the display.
2. Release the (▲) and (▼) keys.
3. Select the variable to be modified using the (▲) or (▼) key.
4. When the variable has been selected it is possible:
 - to display the setting by pressing SET key
 - to modify the setting by pressing the SET key together with the (▲) or (▼) key.

When configuration values have been set you can exit the menu by pressing the (▲) and (▼) keys simultaneously for a few seconds until the cold room temperature reappears.

5. The new settings are saved automatically when you exit the configuration menu.

5.8

LIST OF LEVEL 1 VARIABLES (User level)

VARIABLES	MEANING	VALUE	DEFAULT
<i>r0</i>	Temperature difference compared to main SETPOINT	0.2 - 10 °C	2°C
<i>d0</i>	Defrost interval (hours)	0 - 24 hours	4 hours
<i>d2</i>	End-of-defrost setpoint. Defrost is not executed if the temperature read by the defrost sensor is greater than <i>d2</i> (If the sensor is faulty defrosting is timed)	-35 - 45 °C	15°C
<i>d3</i>	Max defrost duration (minutes)	1 - 60 min	25 min
<i>d7</i>	Drip duration (minutes) At the end of defrost the compressor and fans remain at standstill for time <i>d7</i> , the defrost LED on the front panel flashes.	0 - 10 min	0 min
<i>F5</i>	Fan pause after defrost (minutes) Allows fans to be kept at standstill for a time <i>F5</i> after dripping. This time begins at the end of dripping. If no dripping has been set the fan pause starts directly at the end of defrost.	0 - 10 min	0 min
<i>A1</i>	Minimum temperature alarm Allows user to define a minimum temperature for the room being refrigerated. Below value <i>A1</i> an alarm trips: the alarm LED flashes, displayed temperature flashes and the buzzer sounds to indicate the problem.	-	-45°C
<i>A2</i>	Maximum temperature alarm Allows user to define a maximum temperature for the room being refrigerated. Above value <i>A2</i> an alarm trips: the alarm LED flashes, displayed temperature flashes and the buzzer sounds to indicate the problem.	-	+45°C
<i>tEu</i>	Evaporator sensor temperature display	Displays evaporator temperature (displays nothing if dE =1)	read only

LEVEL 2 PROGRAMMING (Installer level)

5.9

To access the second programming level press the UP (▲) and DOWN (▼) keys and the LIGHT key simultaneously for a few seconds.

When the first programming variable appears the system automatically goes to stand-by.

1. Select the variable to be modified by pressing the UP (▲) and DOWN (▼) keys.

When the parameter has been selected it is possible to:

2. View the setting by pressing the SET key.

3. Modify the setting by holding the SET key down and pressing the (▲) or (▼) key.

4. When configuration settings have been completed you can exit the menu by pressing the (▲) and (▼) keys simultaneously and keeping them pressed until the room temperature reappears.

5. Changes are saved automatically when you exit the configuration menu.

6. Press the STAND-BY key to enable electronic control.

LIST OF LEVEL 2 VARIABLES (Installer level)

5.10

VARIABLES	MEANING	VALUES	DEFAULT
AC	Door switch status	0= normally open 1= normally closed	0
F3	Fan status with compressor off	0 = Fans run continuously 1 = Fans only run when compressor is working	1
F4	Fan pause during defrost	0 = Fans run during defrost 1 = Fans do not run during defrost	1
dE	Sensor presence If the evaporator sensor is disabled defrosts are carried out cyclically with period d0: defrosting ends when an external device trips and closes the remote defrost contact or when time d3 expires.	0 = evaporator sensor present 1 = no evaporator sensor	0
d1	Defrost type , cycle inversion (hot gas) or with heater elements	1= hot gas 0= element	0
Ad	Network address for connection to the TeleNET supervision system	0 - 31	0
Ald	Minimum and maximum temperature signalling and alarm display delay	1...240 min	120 min
C1	Minimum time between shutdown and subsequent switching on of the compressor.	0...15 min	0 min
CAL	Cold room sensor value correction	-10...+10	0
Pc	Compressor protection contact status	0 = NO 1 = NC	0 = NO

doC	Compressor safety time for door switch: when the door is opened the evaporator fans shut down and the compressor will continue working for time doC , after which it will shut down.	0...5 minutes	0
Fst	FAN shutdown TEMPERATURE The fans will stop if the temperature value read by the evaporator sensor is higher than this value.	-45...+45°C	+45°C
Fd	Fst differential	0...+10°C	2°C
tA	NO – NC alarm relay switching	0=activates when alarm is on 1=deactivates when alarm is on	1
AU	Auxiliary/alarm relay control (only on version with relay fitted)	0=alarm relay 1=manual auxiliary relay controlled via AUX key 2= automatic auxiliary relay managed by StA temp. setting with 2°C differential 3= relay disabled / TeleNET function 4= pump down function (see 5.15) 5= free voltage contact for condensing unit (AUX relay and compressor relay in parallel)	0
StA	Temp. setting for aux. relay	-45...+45°C	0
In1	Man in cold room alarm Select input INP1 on the board as <i>compressor protection alarm</i> or as <i>man in cold room alarm</i> (contact NC).	0 = compressor protection 1 = man in room alarm	0
P1	Password type of protection (active when PA is not equal 0)	0 = only display set point 1= display set point, AUX, light access 2= access in programming not permitted 3= access in second level programming not permitted	3
PA	Password (see P1 for the type of protection)	0...999 0 = not active	0
reL	Software release	indicates software version	Read only

5.11**SWITCHING ON THE ECP200 BASE ELECTRONIC CONTROLLER**

After wiring the electronic controller correctly, power up at 230 V AC; the display panel will immediately emit a beep and all the LEDs will come on simultaneously for a few seconds.

5.12**COMPRESSOR ACTIVATION/DEACTIVATION CONDITIONS**

The **ECP200 BASE** controller activates the compressor when cold room temperature exceeds setting+differential (r0); it deactivates the compressor when cold room temperature is lower than the setting.

5.13**MANUAL DEFROSTING**

To defrost just press the dedicated key (see section 5.2) to activate the elements relay. Defrosting will not take place if the end-of-defrost temperature setting (d2) is lower than the temperature detected by the evaporator sensor. Defrosting ends when the end-of-defrost temperature (d2) or maximum defrost time (d3) is reached.

HOT GAS DEFROSTING**5.14**

Set parameter d1 =1 to defrost in cycle inversion mode.

The compressor relay and defrost relay are activated throughout the defrost phase.

To ensure proper control of the system the installer must use the defrost output: this must allow opening of the cycle inversion solenoid valve and closure of the liquid solenoid valve. For capillary systems (without thermostat valve) it is only necessary to control the cycle inversion solenoid valve via the defrost relay control.

PUMP DOWN FUNCTION**5.15**

Pump down function is activated when parameter AU=4 (only for version with AUX/Alarm relay).

Connect pump down pressostat on the digital input 1-3. The compressor is directly controlled by pressostat.

Connect evaporator solenoid valve on the AUX relay. The solenoid is controlled directly by thermostat.

PASSWORD FUNCTION**5.16**

When parameter PA is setting with value different to 0 the protection function is activated. See parameter P1 for the different protection.

When PA is setting the protection start after two minutes of inactivity. On display appear 000. With up/down modify the number, with set key confirm it.

Use universal number 100 if you don't remember the password.

CHAPTER 6: OPTIONAL KITS

6.1

TeleNET MONITORING/SUPERVISION SYSTEM

For connections regarding the *TeleNET* monitoring/supervision system see APPENDIX A.10 (page 32) of this manual and, for the ECP200 BASE4A and ECP200 BASE2A models, jumper JP2 as described in 6.2 on page 21.



ALARM RELAY / *TeleNET* SWITCHING

6.2

Fig. 1: Undo the 4 closure screws on the front panel.



Fig. 3: Undo the 6 CPU board fixing screws and remove the board from the frontal section of the box in ABS.

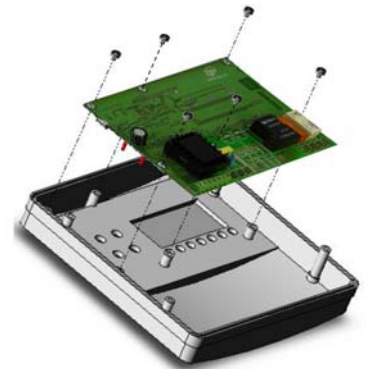


Fig. 4: Remove the jumper from JUMPER JP2.



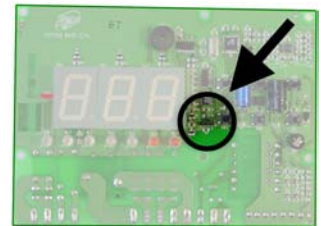


Fig. 5: Insert the jumper in JUMPER JP2 in position 2-1 to select **Alarm relay**
Or position 3-2 to select **TeleNET**.

AUX. ALARM RELAY

TeleNET

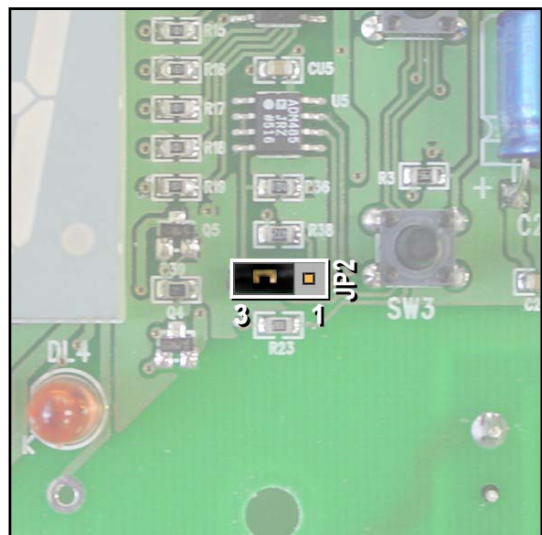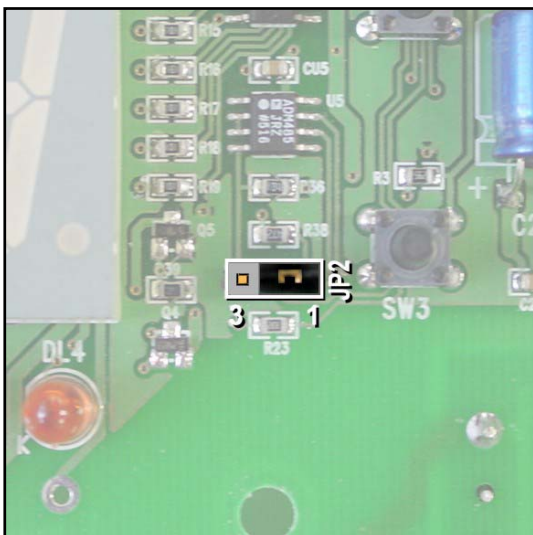

CHAPTER 7: TROUBLESHOOTING

7.1

TROUBLESHOOTING

In the event of any anomalies the ECP200 system warns the operator by displaying alarm codes and sounding the warning buzzer inside the control panel. If an alarm is tripped the display will show one of the following messages.

ALARM CODE	POSSIBLE CAUSE	SOLUTION
E0	<i>Cold room temperature sensor not working properly</i>	<ul style="list-style-type: none"> • Check that cold room temperature sensor is working properly • If the problem persists replace the sensor
E1	<i>Defrost sensor not working properly</i> (In this case defrosts will last time d3)	<ul style="list-style-type: none"> • Check that defrost sensor is working properly • If the problems persists replace the sensor
E2	<i>Eeprom alarm</i> An EEPROM memory alarm has been detected (All outputs except the alarm one are deactivated)	<ul style="list-style-type: none"> • Switch unit off and back on
E8	<i>Man in cold room alarm</i>	<ul style="list-style-type: none"> • Reset the alarm input inside the cold room
Ec	<i>Compressor protection tripped</i> (e.g. thermal protection or max pressure switch) (All outputs except the alarm one – where applicable – are deactivated)	<ul style="list-style-type: none"> • Check that compressor is working properly • Check compressor absorption • If the problem persists contact the technical assistance service
Temperature shown on display is flashing	<i>Minimum or maximum temperature alarm.</i> The temperature inside the cold room has exceeded the min. or max. temperature alarm setting (see variables A1 and A2, user programming level)	<ul style="list-style-type: none"> • Check that the compressor is working properly. • Sensor not reading temperature properly or compressor start/stop control not working.

ALLEGATI / APPENDICES**A.1****DICHIARAZIONE DI CONFORMITA' CE****COSTRUTTORE / MANUFACTURER**

PEGO SRL Via Piacentina,6b 45030 Occhiobello (RO) - ITALY -

DENOMINAZIONE DEL PRODOTTO / NAME OF THE PRODUCT

MOD.: ECP200 BASE 2 - ECP200 BASE 2 A - ECP200 BASE 4 - ECP200 BASE 4 A

IL PRODOTTO E' CONFORME ALLE SEGUENTI DIRETTIVE CE/THE PRODUCT IS IN CONFORMITY WITH THE REQUIREMENTS OF THE FOLLOWING EUROPEAN DIRECTIVES:

- 2006/95/CE** Direttiva del Consiglio per l'unificazione delle normative dei Paesi CEE relativa al materiale elettrico destinato ad essere utilizzato entro certi limiti di tensione e successive modificazioni
- 2006/95/EC** EC Directive on unification of laws of the Member States relating to electrical equipment employed within certain voltage limits and subsequent amendments
- 89/336 CEE** Direttiva del Consiglio per l'unificazione delle normative dei Paesi CEE relativa alla compatibilità elettromagnetica e successive modificazioni
- 89/336 EEC** EC Directive on unification of the laws of the Member States relating to electro-magnetic compatibility and subsequent amendments
- 93/68 CEE** Direttiva del consiglio per la marcatura CE del materiale elettrico destinato ad essere utilizzato entro taluni limiti di tensione.


**LA CONFORMITA' PRESCRITTA DALLE DIRETTIVE E' GARANTITA DALL' ADEMPIMENTO A TUTTI GLI EFFETTI DELLE SEGUENTI NORME:
CONFORMITY WITH THE REQUIREMENTS OF THIS DIRECTIVE IS TESTIFIED BY COMPLETE ADHERENCE TO THE FOLLOWING STANDARDS:**

NORME ARMONIZZATE / HARMONIZED EUROPEAN STANDARDS

EN 61000-6-1 EN 61000-6-3 EN 60335 – 1


ECP200 BASE4 WIRING DIAGRAM

A.2

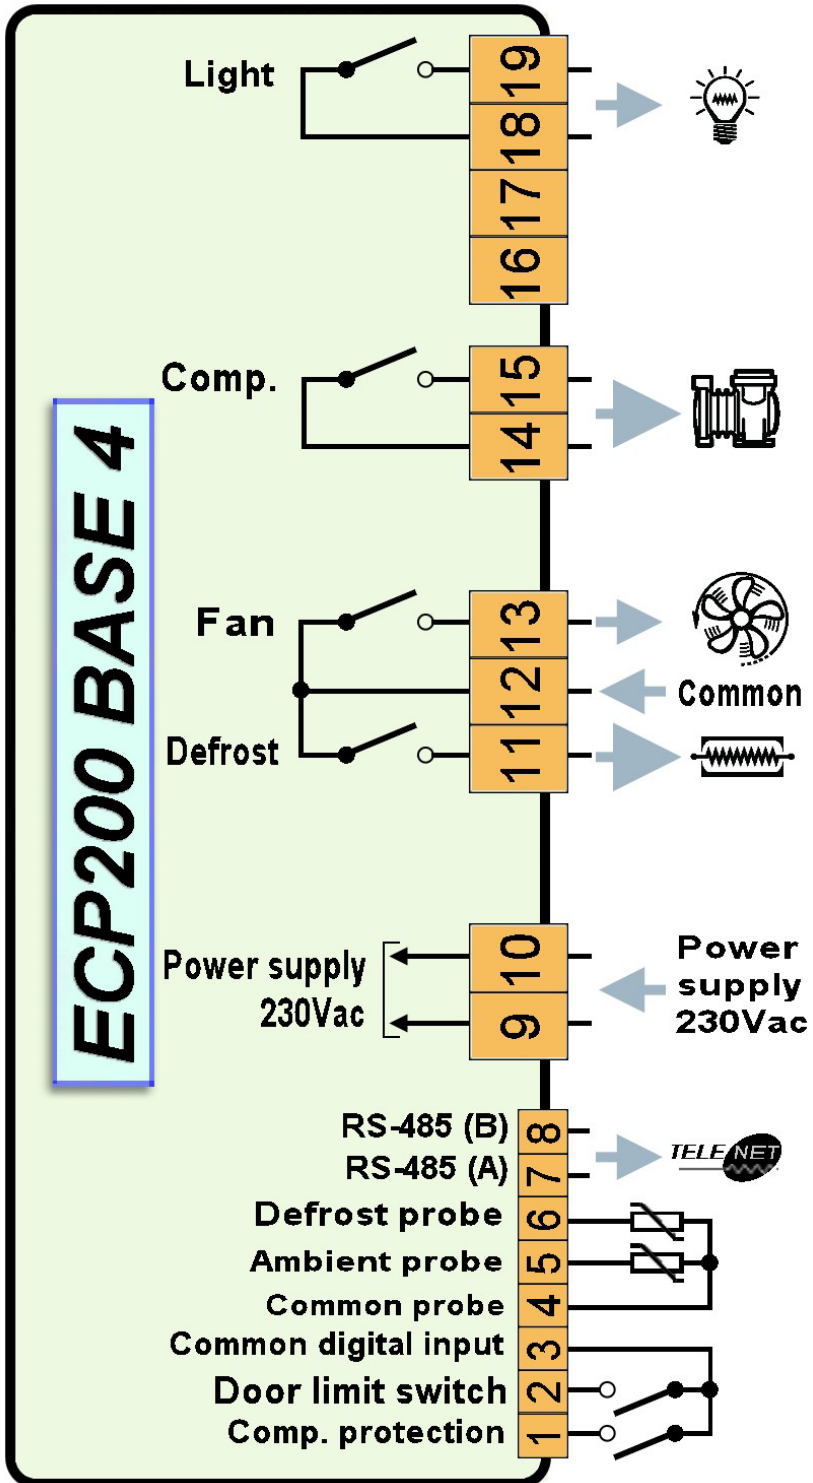


A.3

ECP200 BASE4A WIRING DIAGRAM

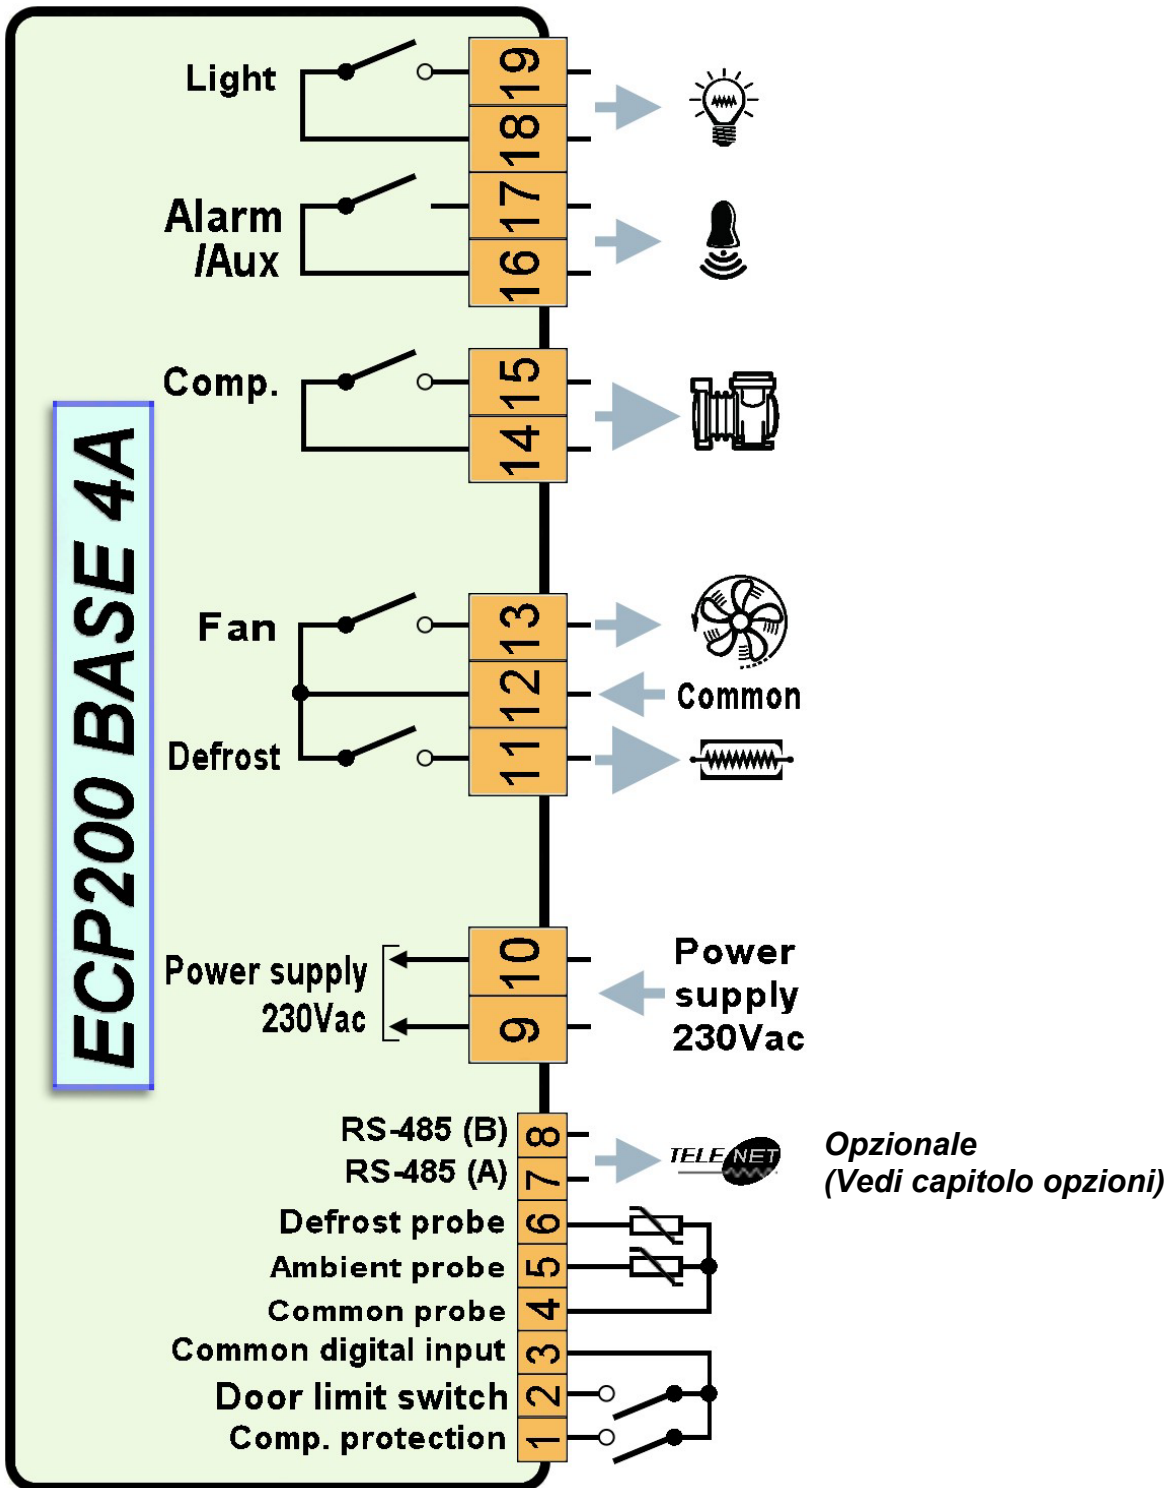


A.4

ECP200 BASE2 WIRING DIAGRAM

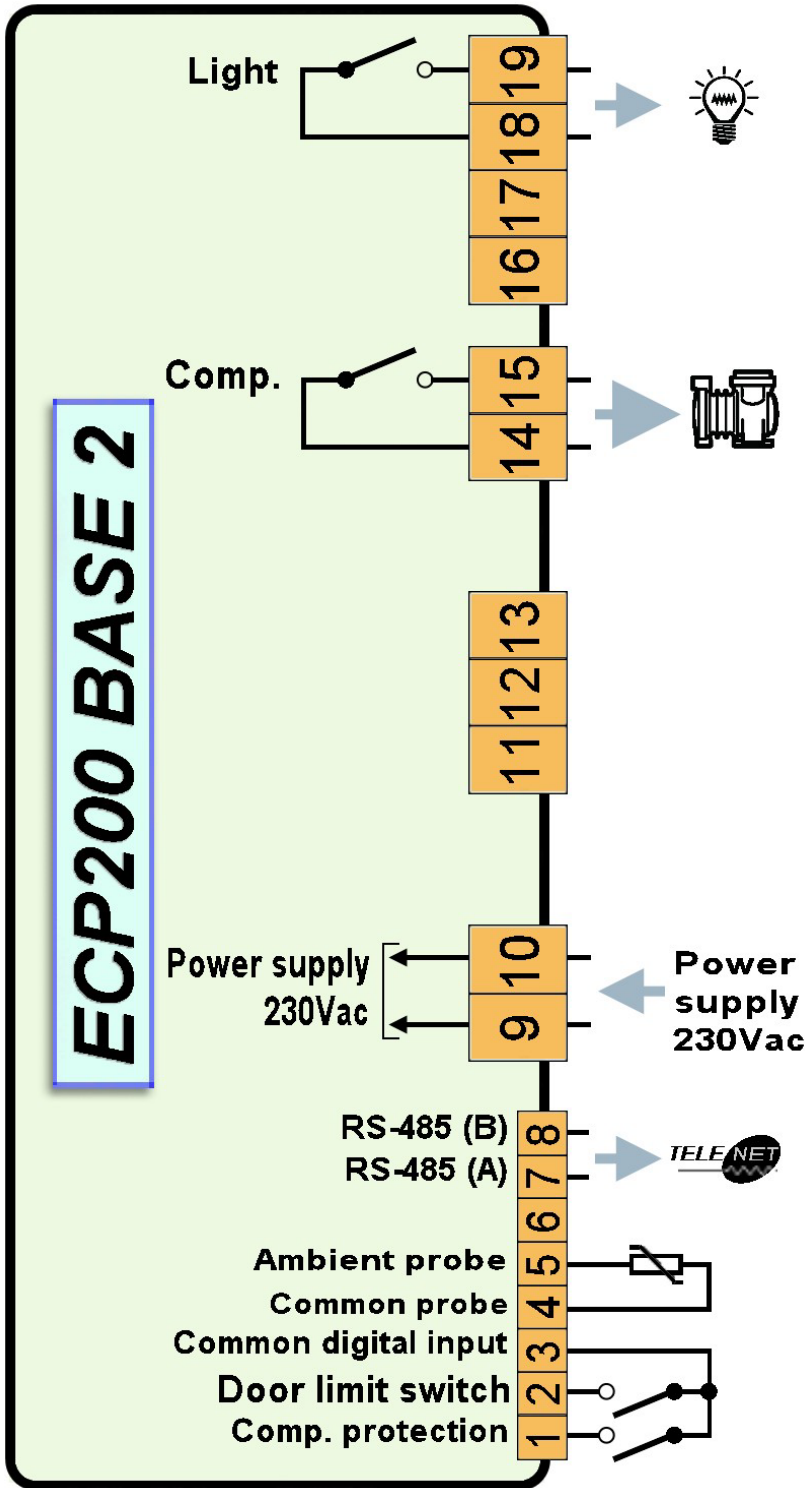

A.5


ECP200 BASE2A WIRING DIAGRAM

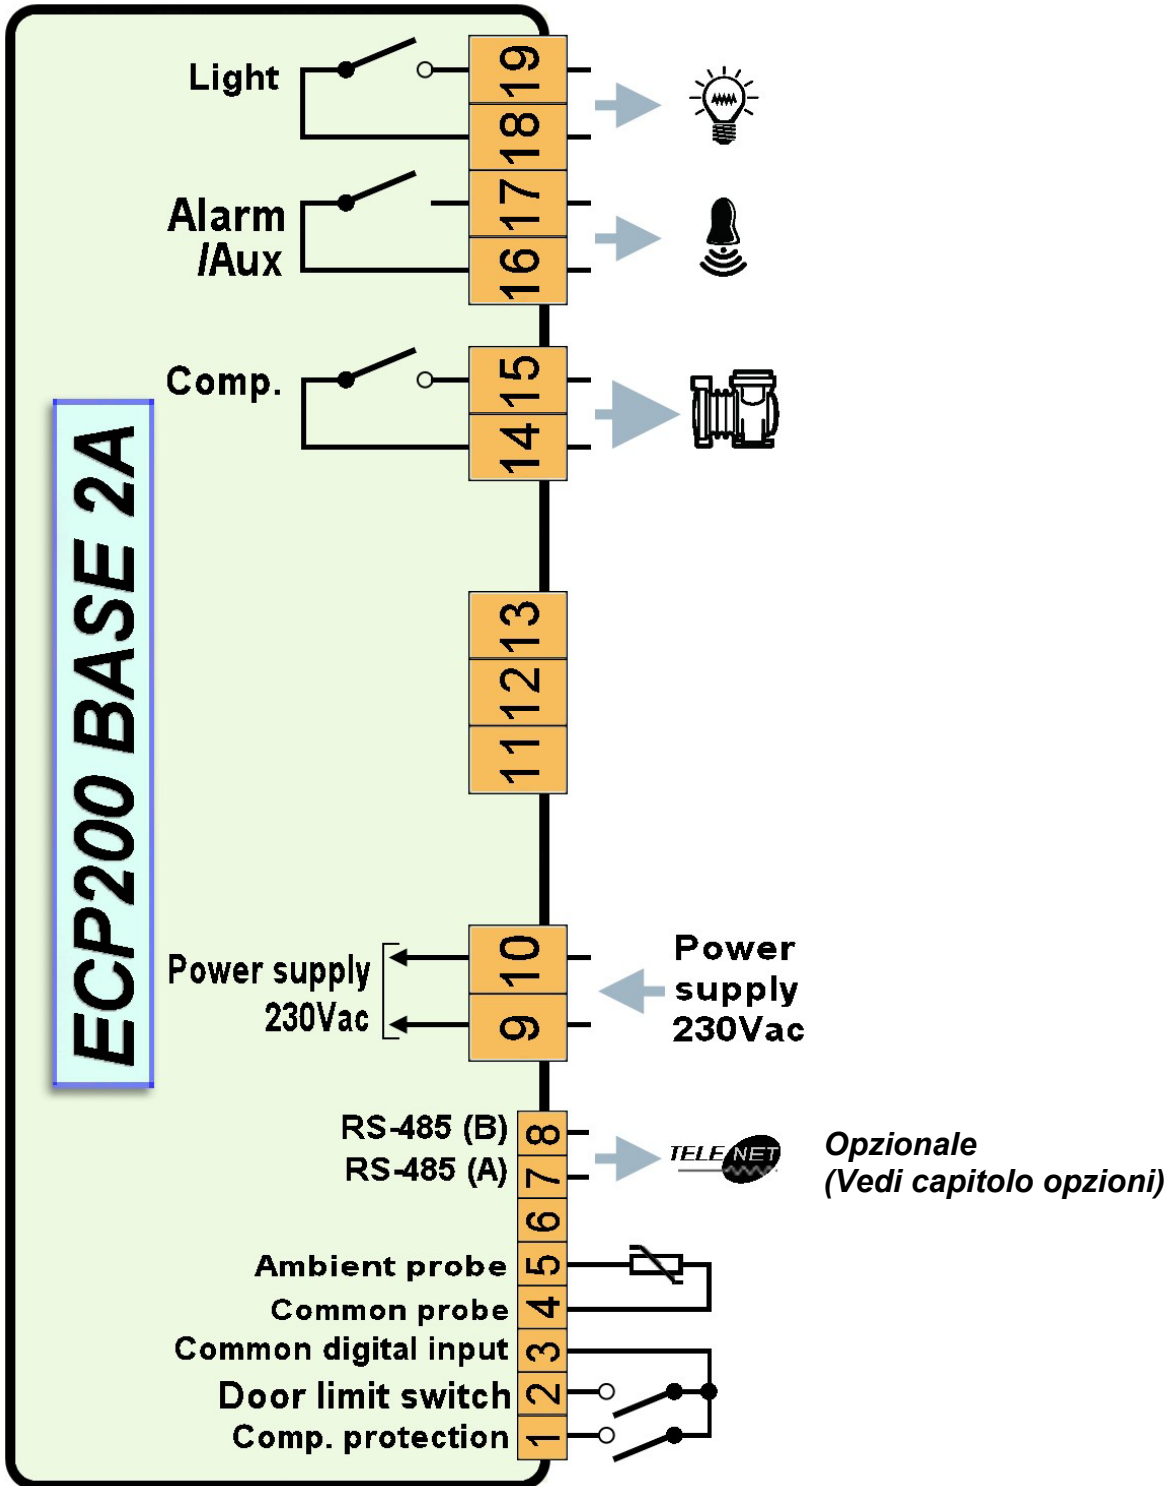

A.6

CONNECTION EXAMPLE (1) - ECP200 BASE4 /BASE4A


Connection with outputs powered for direct control of functions.

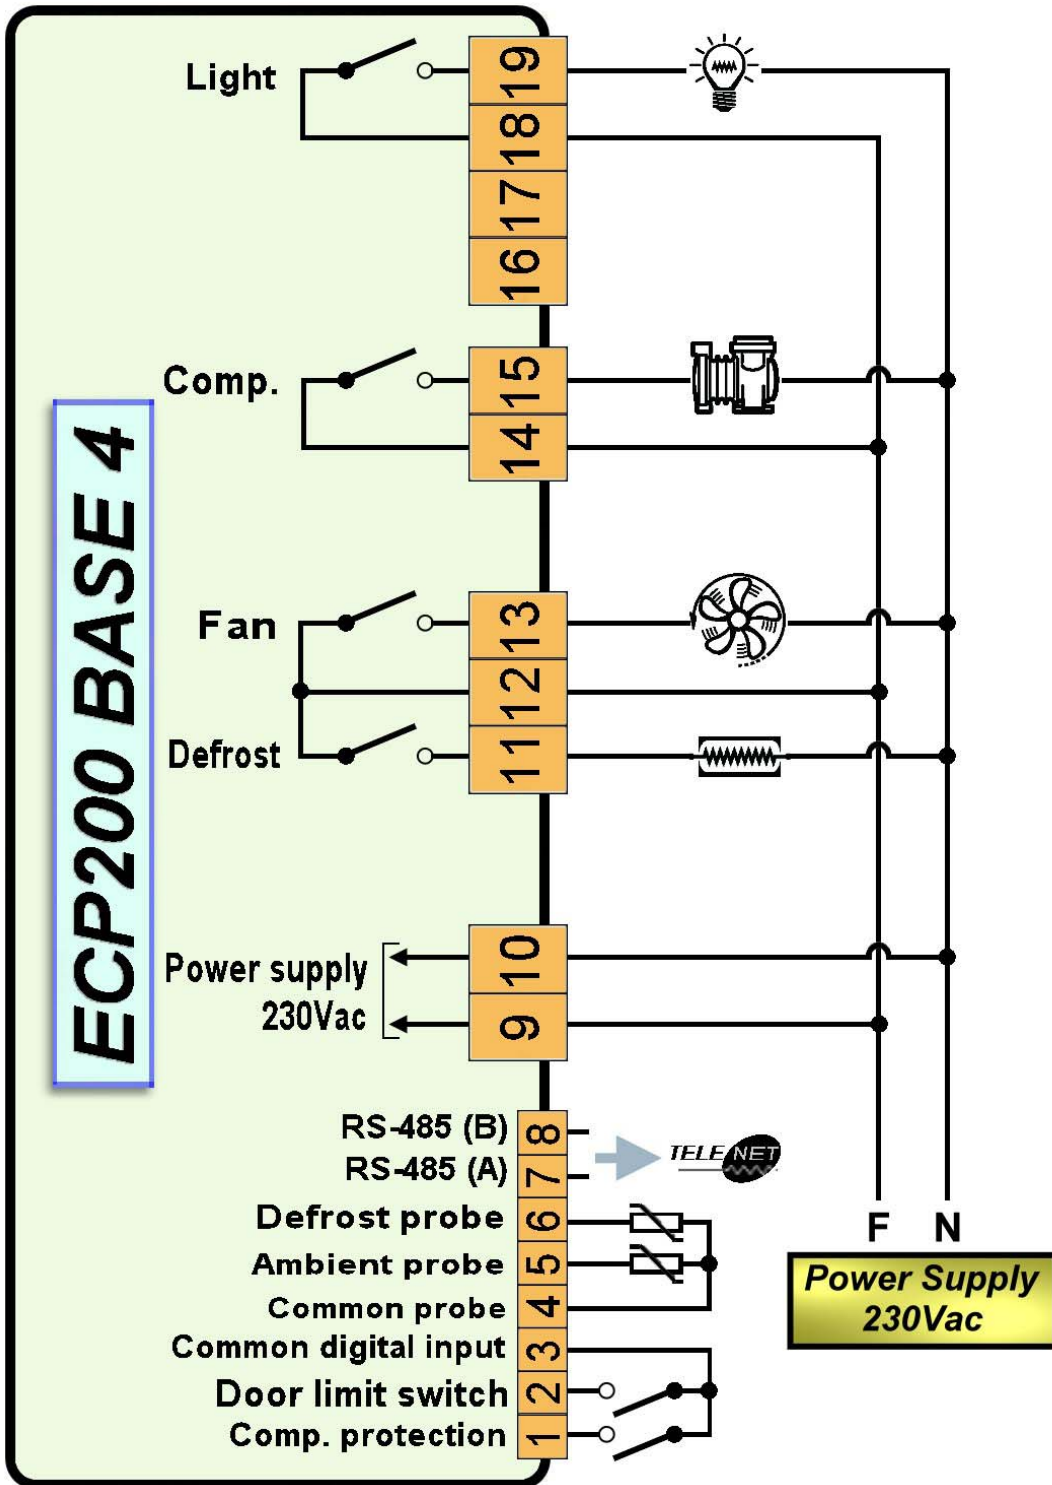

A.7

CONNECTION EXAMPLE (2) - ECP200 BASE4 /BASE4A


Mixed connection with on/off contact to enable towards condensing unit power board and fan, light and defrost outputs powered for direct control.

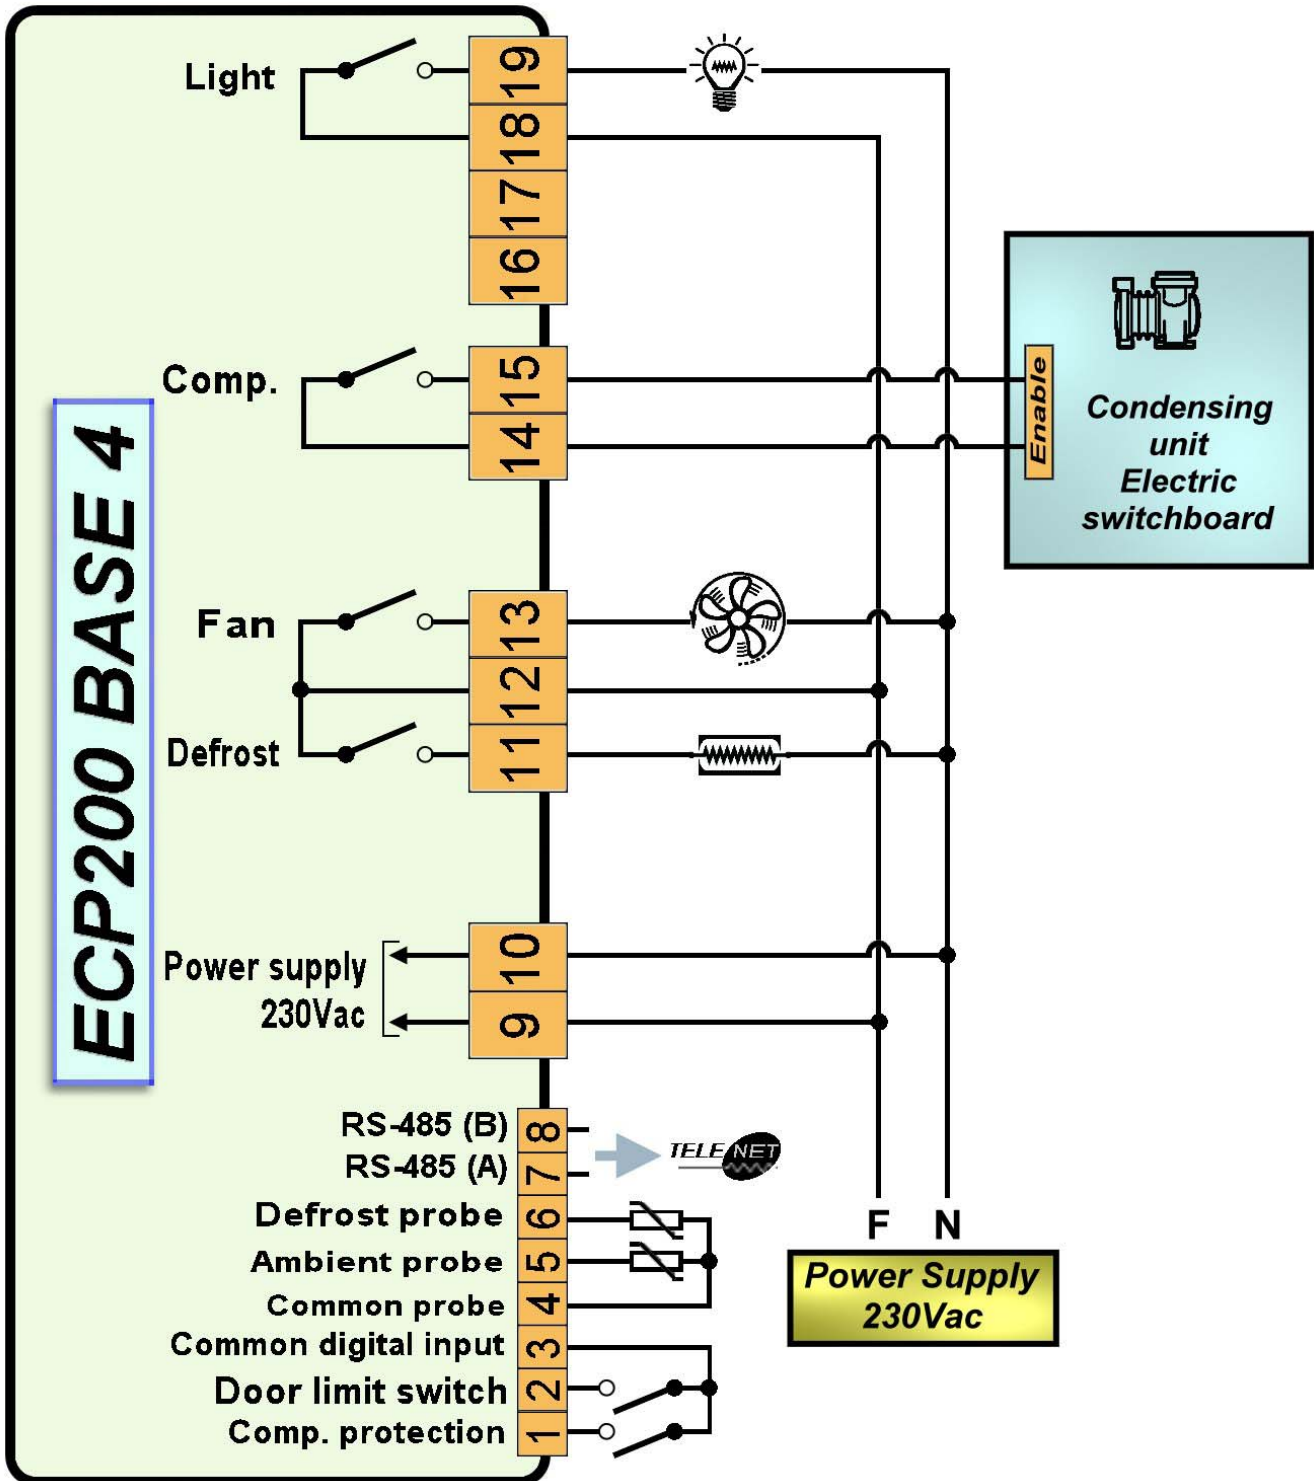

A.8

CONNECTION EXAMPLE (3) - ECP200 BASE2 /BASE2A


Connection with outputs powered for direct control of functions.

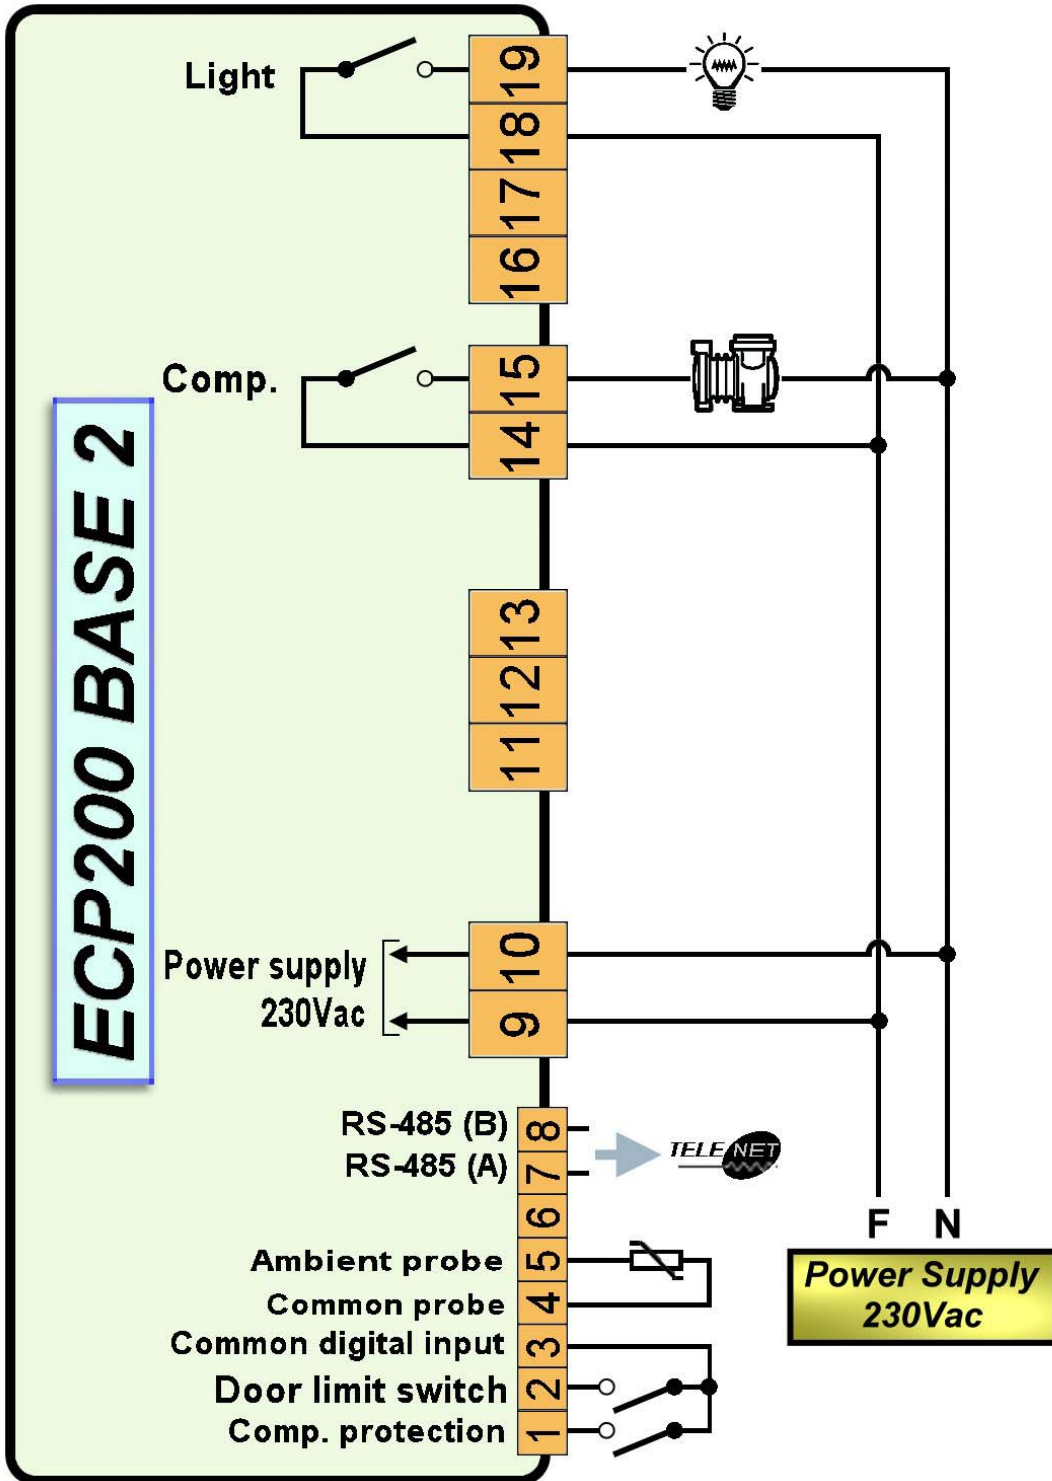

A.9

CONNECTION EXAMPLE (4) - ECP200 BASE2 /BASE2A

Mixed connection with on/off contact powered to enable towards room power board and light output powered for direct control.

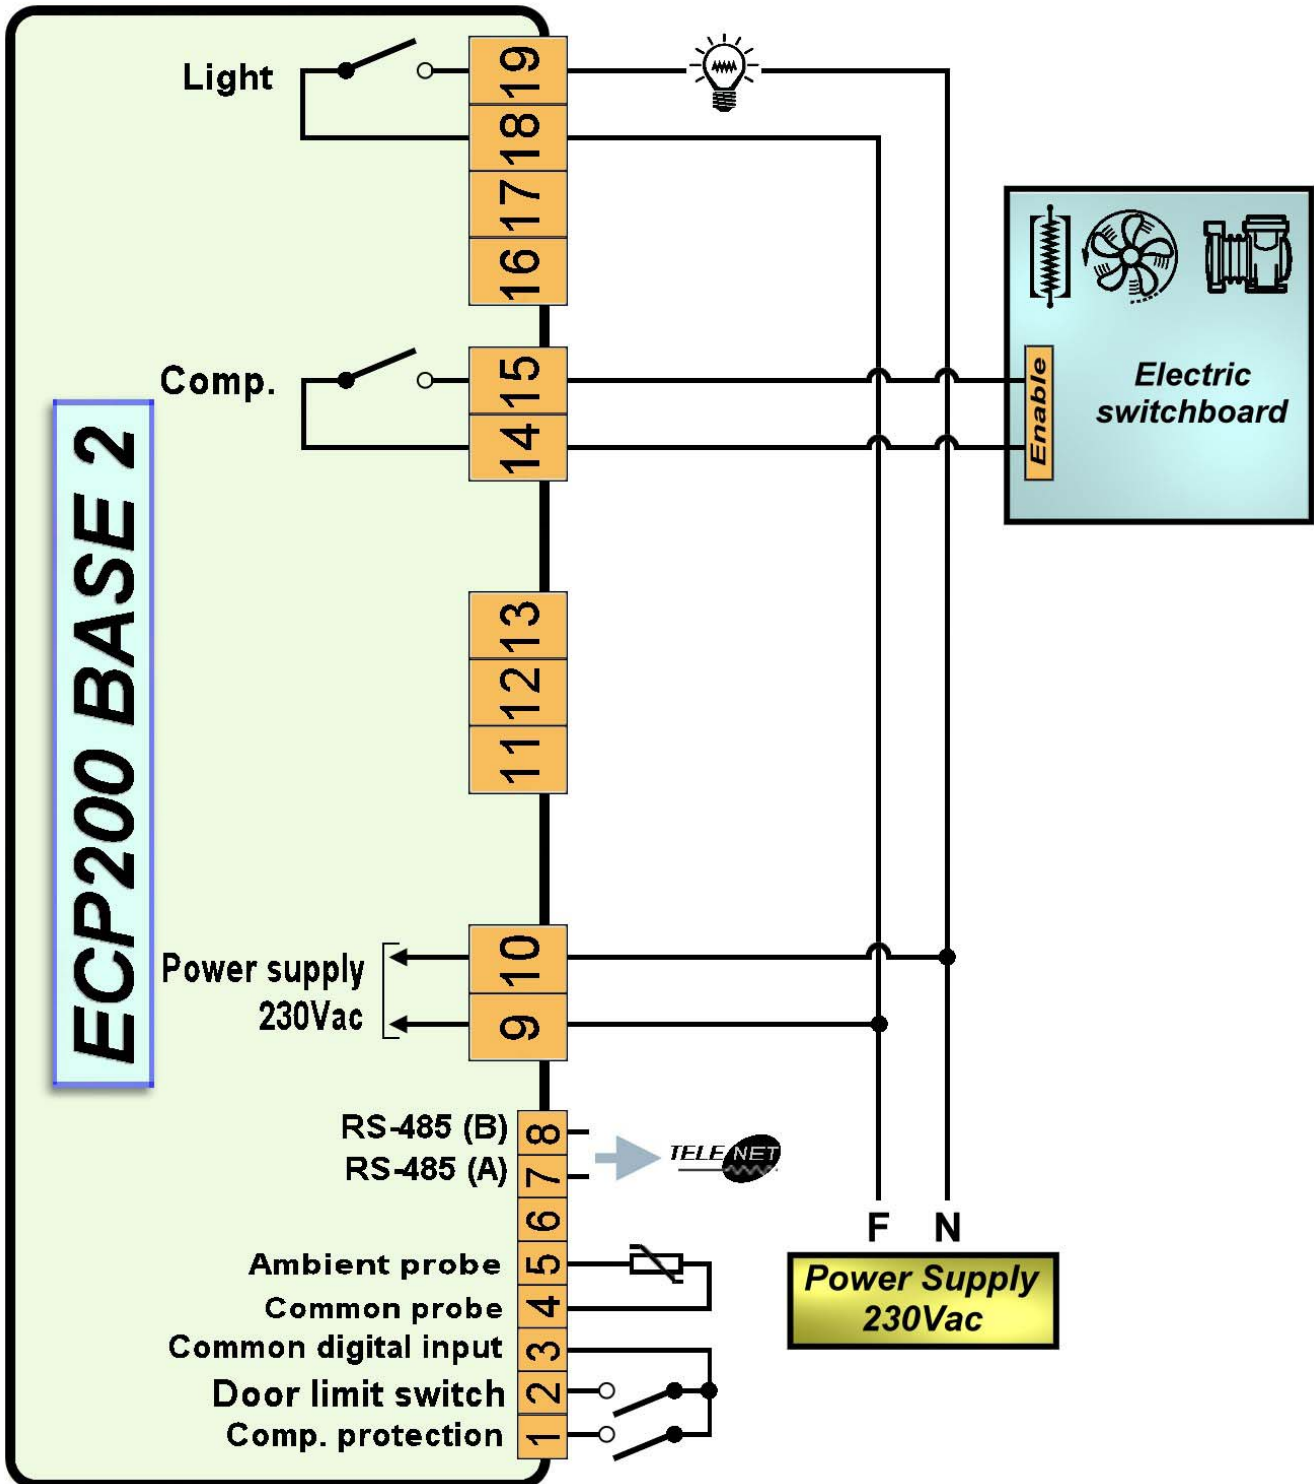


A.10

TeleNET NETWORK CONNECTION WIRING DIAGRAM


BEFORE CONNECTING UP COMMUTATE THE DATAPRINTER PLUS (PRINTER) / TeleNET FUNCTION VIA DIP-SWITCH AS INDICATED IN CHAP. 6, PAGE 23.



Morsettiera di collegamento TeleNET
Terminal block TeleNET connection

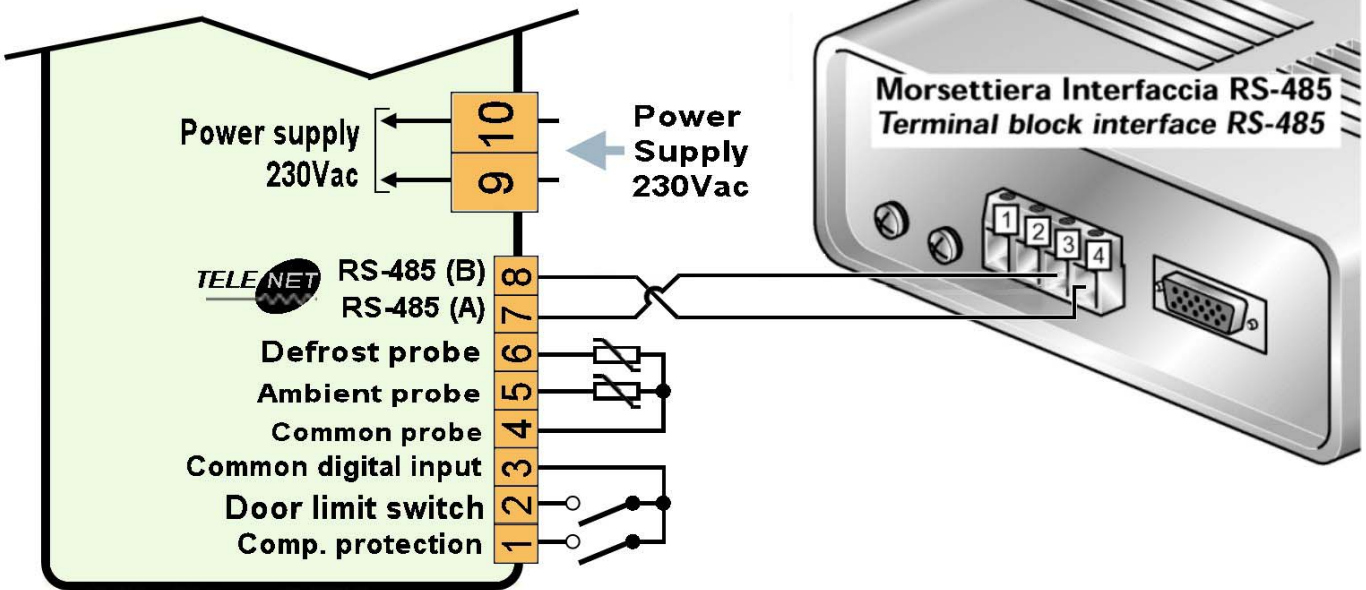


Interfaccia RS-485
Interface RS-485

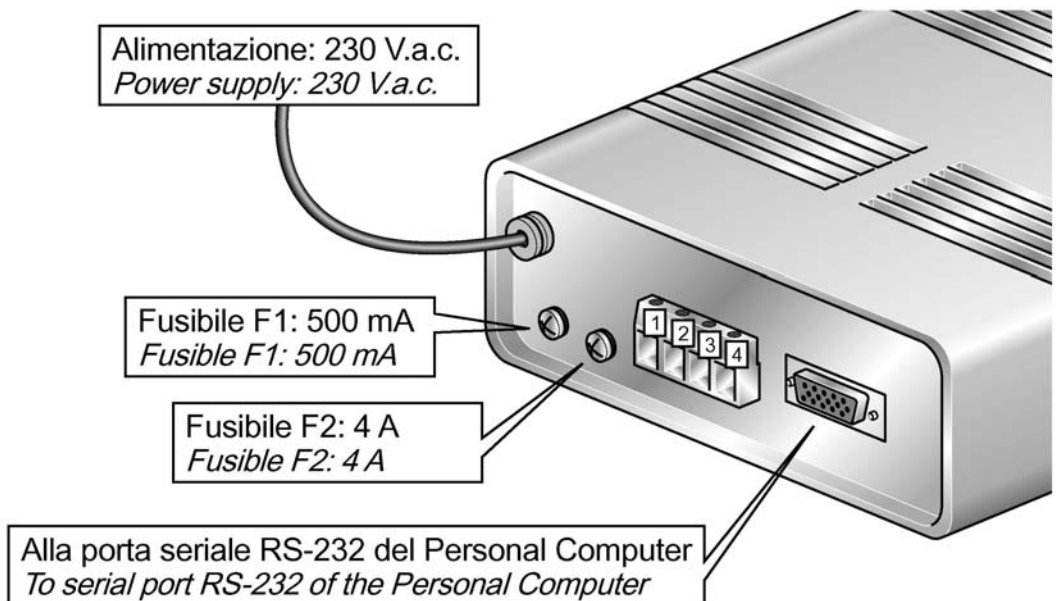

A.11

SCHINT230 OPTIONAL KIT


With the optional SCHINT230 KIT is possible a simple connection with outputs powered for direct control of functions.

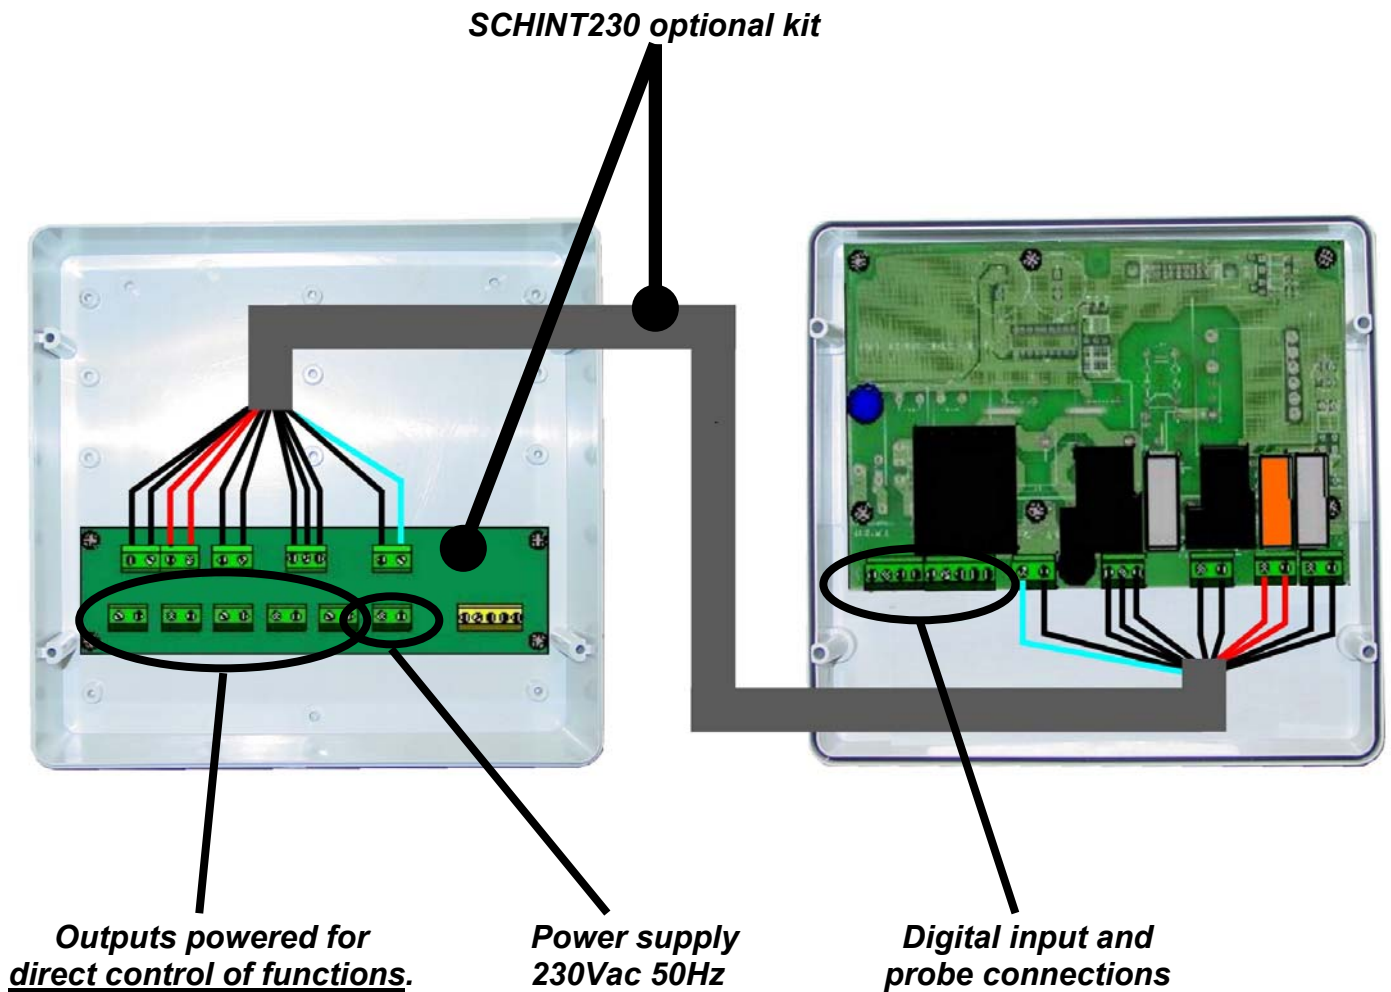

Connect the ECP BASE terminal block to the SCHINT230 terminal block with the wire kit. The connections must be realized PIN to PIN respecting the wire numbers.

A.12

SCHINT230 OPTIONAL KIT WIRING DIAGRAM

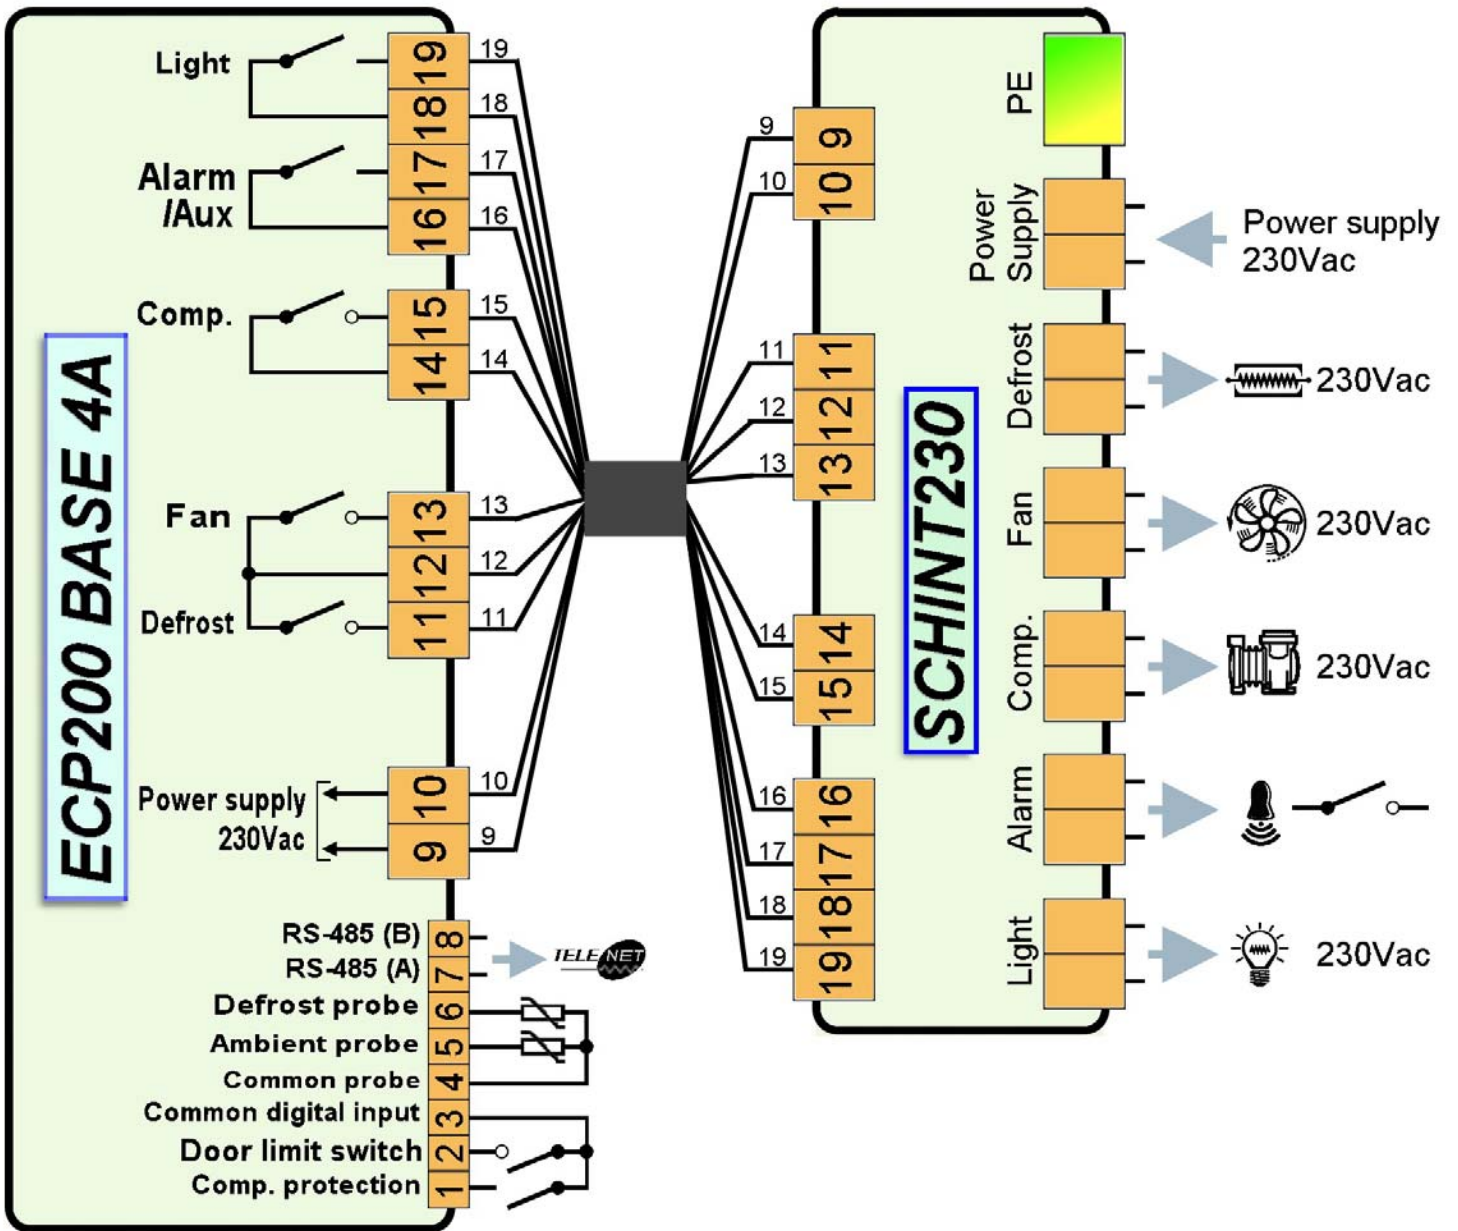



PEGO S.r.l.

Via Piacentina, 6/b

45030 OCCHIOBELLO –ROVIGO-

Tel : 0425 762906

Fax: 0425 762905

www.peggo.it

e-mail: info@peggo.it

Distributor: